



July 2008

# Walkman™

---

*Enjoy your favourite music*



Sony Ericsson









# Contents

Instruction symbols .....	2
Introduction .....	2
Connecting using a USB cable .....	2
Transferring content .....	3
Accessing your music .....	4
Listening to music .....	4
Walkman™ player controls .....	4
Listening to music .....	5
Walkman™ player options .....	5
Browsing your music .....	6
Playlists .....	6
Online music and videos .....	7
TrackID™ .....	7
PlayNow™ .....	7
Using sounds .....	8
Radio .....	8
Listening to the radio .....	8
Saving channels .....	9
Related information .....	9
Trademarks and acknowledgements .....	10

# Instruction symbols

---

The following instruction symbols may appear in this Getting started guide:

	Tip
	Note
	Warning
	Indicates that a service or function is network- or subscription-dependent. Contact your network operator for details.
>	Use the selection keys or the navigation key to scroll and select
	Press the navigation key up
	Press the navigation key down
	Press the navigation key left
	Press the navigation key right

## Introduction

---

- ! Prior to use, please see important warranty information and terms for safe and efficient use separately provided. Please see the full User Guide for important information, terms, and conditions regarding your use of this device and the features profiled in this guide.

You can use the Walkman™ player to listen to music, audio books and podcasts. You can extract audio tracks from CDs and transfer them to your phone.

## Connecting using a USB cable

---

You can connect your phone to a computer using a USB cable compatible with your phone.

### *To connect your phone to a computer with the USB cable*

1. Connect the USB cable to your phone and computer.
  2. **Computer:** If the *Found New Hardware Wizard* appears, click *Cancel* to exit the wizard.
  3. **Phone:** Select **Mass storage**.
  4. **Computer:** Your phone memory is added as a removable disk in Windows® Explorer.
  5. **Computer:** If a dialogue box asks what to do with the files on the removable disk, select *Cancel*.
- ! If your phone has a memory card, this is also added as a removable disk in Windows® Explorer.

# Transferring content

---

To connect the USB cable, see *Connecting using a USB cable* on page 2.

## **To transfer content**

You can transfer music from your computer to your phone memory or Memory Stick Micro™ (M2™). There are two ways to connect the phone to a computer:

- Using the USB cable that comes with the phone
- With a Bluetooth™ wireless technology connection

You can drag and drop files between your phone or memory card and a computer in Microsoft® Windows Explorer.

- ! Do not disconnect the USB cable during file transfer as this may harm the phone memory or the memory card.



### Hard Disk Drives

---



### Devices with Removable Storage

---

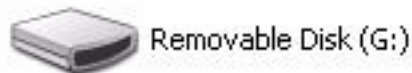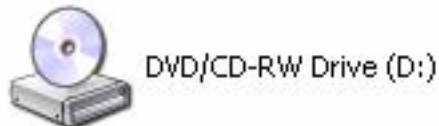

Phone memory

Memory card

## **To transfer files in Mass storage mode**

1. Connect the USB cable to the phone and the computer.
2. Phone: From standby select **Menu > Settings > the Connectivity tab > USB > Mass storage**.
3. Computer: Wait until the phone memory and memory card appear as external disks in Microsoft Windows Explorer.
4. Computer: On the computer desktop, double-click the My Computer icon.

5. Computer: To view the phone memory and memory card folders, double-click the icon representing your phone under Devices with removable storage.
6. Copy and paste your file, or drag and drop it, into the folder you want on your computer, in your phone memory or on your memory card.

## Accessing your music

---

You can access your music from **File manager**. For more information about how to handle content in File manager, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) and download the *Managing content* Getting started guide.

### To access File manager


- From standby select **Menu > File manager**.

## Listening to music

---

### Walkman™ player controls

---

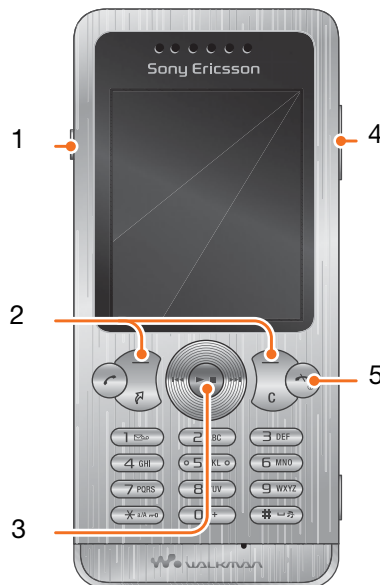

- 1 Walkman™ key.
- 2 Selection keys.
- 3 Navigation key.
- 4 Volume key.
- 5 End key.

## Listening to music

---



### *To play music*

1. From standby select **Music**.
2. Browse by category using the navigation key.
3. Scroll to a track and select **Play**.

### *To stop playing music*

- Press the centre selection key.

### *To fast forward and rewind*

- Press and hold down  or .

### *To move between tracks*

- Press  or .

### *To view a current play queue*

- Press .

### *To browse your music*

- Select **Options** > **My music**.

### *To change the volume*

- Press the volume key up or down.

### *To minimise the player*

- Press .

### *To return to the player*

- Press .

### *To stop playing music and return to standby*

- Press .

## Walkman™ player options

---

In the Walkman™ player you have the following **Options**:

- **My music** – browse your music tracks.
- **Settings**
  - **Play mode** – select **Shuffle** to play tracks randomly in a playlist or **Loop** to restart a playlist after the last track ends.
  - **Equaliser** – change the settings of the treble and bass when playing a track.
  - **Stereo widening** – change the output sound to enhance the stereo experience.
  - **Visualisations** – change the visualisation to accompany your tracks.
  - **Skins** – change the appearance of Walkman™ player.
  - **Light effects** – Light effects – select to have light effects on or off when music is playing.
- **File**
  - **Send** – send a track using an available transfer method.
  - **Information** – view information about a track you have selected.

- **Delete** – remove tracks. Tracks are only removed from the current playlist.
- **Save as playlist** – save a play queue to a new playlist.
- **Minimise** – minimise the Walkman™ player and return to standby with music still playing.

## Browsing your music

---

You can browse for tracks by category:

- **Artists** – list tracks by artist.
- **Albums** – list tracks by album.
- **Tracks** – list all music tracks.
- **Playlists** – create your own lists of tracks and access playlists automatically created based on your selections.
- **Onl.channels** – lists of bookmarks for streaming music.


## Playlists


---

You can create playlists to organise your music. You can add tracks to more than one playlist. It may take a few minutes for the phone to create a playlist.


Deleting a playlist, or a track from a playlist, does not delete the track from the memory, just the reference to the track in that list.

### *To create a playlist*


1. From standby press .
2. Select **Options** > **My music** > **My playlists** > **New playlist**.
3. Enter a name and select **OK**.
4. Scroll to a track and select **OK**.

 You can add folders to a playlist. All tracks in a folder are added to the playlist.


### *To add files to a playlist*

1. From standby press .
2. Select **Options** > **Options** > **My playlists**.
3. Scroll to a playlist and select **Options** > **Add media**.
4. Scroll to a track and select **OK**.

### *To remove files from a playlist*

1. From standby press .
2. Select **Options** > **Options** > **My playlists**.
3. Scroll to and select a playlist, then select **Options**.
4. Select the file and press **Options** > **Delete** > **Yes**.

### *To delete a playlist*

1. From standby press .
2. Select **Options** > **Options** > **My playlists**.
3. Scroll to and select a playlist, then select **Options**.
4. Select **Delete playlist**.

## Online music and videos

---

You can listen to music and view videos by streaming them to your phone from the Internet. In order to stream, you must have a data account. Your phone may be pre-configured with a data account. If it is not, please contact your network operator or go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to download the *Using the Internet* Getting started guide.

### *To select a data account for streaming*

1. From standby select **Menu** > **Settings** > the **Connectivity** tab > **InternetSettings**.
2. Select the data account to use.
3. Select **OK**.

### *To stream music and video clips*

1. From standby select **Menu** > **Internet**.
2. Select **Options** > **Enter address**.
3. Enter a Web address to stream from.

## TrackID™

---

TrackID™ is a music recognition service. You can search for song title, artist and album name for a track you hear playing through a loudspeaker or on the radio. For best results, use TrackID™ in a quiet area.

! For cost information contact your service provider.

### *To search for track information when you hear a track through a loudspeaker*

- From standby select **Menu** > **Entertainment** > **TrackID™** > **Start**.

### *To search for track information when you hear a track on the radio*

- When the radio is playing, select **Options** > **TrackID™**.

## PlayNow™

---

PlayNow™ is a download service for music tracks, ringtones, games, wallpapers and themes. You can access this service from your phone and the Web. You can browse, search for and preview content, before deciding to download it to your phone or computer.

Before you start, make sure that:

- You have free memory in your phone.
- You have a Flash player installed to access the PlayNow™.
- You have a phone subscription that supports EDGE/UMTS or GPRS data transmission.
- If necessary, you register as an Internet user with your service provider or network operator.

💡 For more information you can download the *Using the Internet* Getting started guide or the *PlayNow™* Getting started guide from [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

**To access PlayNow™**

- From standby select **Menu > PlayNow™**.

## Using sounds

---

You can use a sound as a ringtone, an alarm signal, a message alert or a contact ringtone.

**To use a sound**

1. From standby select **Menu > File manager > Music**.
2. Find an item and select **Options > Ringtone**.
3. Select an option.

## Radio

---

The handsfree works as the antenna and it must be connected to the phone.

- ! Do not use the phone as a radio in places where this is prohibited.

## Listening to the radio

---

**To listen to the radio**

1. Connect the handsfree to the phone.
2. From standby select **Menu > Radio**.

**To listen to a saved FM radio channel**

- When the FM radio is on, press (0+) – (9).

**To minimise the radio**

1. Select **Back**.
2. **Minimise radio?** appears. Select **Yes**.

**To turn the FM radio off when minimised**

1. Select **Menu > Radio**.
2. Select **Back**.
3. **Minimise radio?** appears. Select **No**.

**To exit the FM radio**

1. Select **Back**.
2. **Minimise radio?** appears. Select **No**.

**To change the volume**



- Press the volume key up or down.

## Saving channels

---

You can save up to 20 preset channels.

### To search for channels automatically

- Press and hold  or .

### To search for all frequencies manually

- Press  or .

### To save an FM radio channel

1. Select **Options** > **Save**.
2. Scroll to a position and press **Select**.

## Radio options

The following **Options** are available:

- **Mute** – turn off the speaker.
- **TrackID™** – search for track titles, artists and album names to identify music via the Internet.
- **Set frequency** – enter a frequency manually.
- **Channels** – select, rename, replace or delete a saved channel.
- **Save** – save the current frequency in a position.
- **Stereo mode** – turn on stereo sound.
- **RDS** – set options for alternative frequency (AF) and station information.
- **Speaker on** – use the speaker.

## Related information

---

Support documents, software, settings and more information are available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

## Formats

These formats are supported in your phone:

File types	Formats	Extensions
Audio (all listed audio file formats are supported ringtone file formats)	3GP AAC MP4 M4A MP3 AMR-NB WAV	.3gp .aac .mp4 .m4a .mp3 .amr .wav
Video (including audio part)	MP4 (Video: MPEG4, Audio: AAC or AMR) 3GPP™ (Video: MPEG4, H.263, Audio: AAC or AMR)	.mp4 .3gp
Streaming transport	RTSP according to 3GPP™	

File types	Formats	Extensions
Video encoding	H.263	3GP/MP4
Audio encoding	AMR-NB	.amr

File types	Decoder format	Supported in file format
Video decoding	MPEG-4 Visual Simple Profile Level 0	3GP/MP4
	H.263	3GP/MP4
Audio decoding	AAC	.mp4, .3gp
	AMR-NB	.amr
	AMR-WB	.amr
	AAC+	.mp4, .3gp
	AAC/LC	.mp4, .3gp
	WAV	.wav
	mid	.mid
	3gp	.3gp
	MP4	.mp4
	M4A	.m4a
	IMY	.imy
	MP3	.mp3

## Trademarks and acknowledgements

The Liquid Identity logo, TrackID and PlayNow are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

Sony, WALKMAN and the WALKMAN logo are trademarks or registered trademarks of Sony Corporation.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

RealAudio and RealVideo are trademarks or registered trademarks of RealNetworks, Inc.

Microsoft, Windows and Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

TrackID™ is powered by Gracenote™ Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

3GPP is a trademark or a registered trademark of ETSI.

All other trademarks and copyrights are the property of their respective owners.

Any rights not expressly granted herein are reserved.

This Getting started guide is published by:

Sony Ericsson Mobile Communications AB,  
SE-221 88 Lund, Sweden

Phone: +46 46 19 40 00

Fax: +46 46 19 41 00

[www.sonyericsson.com](http://www.sonyericsson.com)

© Sony Ericsson Mobile Communications AB,  
2008. All rights reserved. In conjunction with your  
personal use of the device, you are hereby  
granted a license to download and/or print a  
copy of this document.

Any rights not expressly granted herein are  
reserved.

First edition (July 2008)

Publication number: 1215-8200.1

This document is published by Sony Ericsson Mobile Communications AB, without any warranty\*. Improvements and changes to this text necessitated by typographical errors, inaccuracies of current information or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this document. Printed versions are to be regarded as temporary reference copies only. Please see the full User Guide for important information, terms, and conditions regarding your use of this device and the features profiled in this guide.

\*All implied warranties, including without limitation the implied warranties of merchantability or fitness for a particular purpose, are excluded. In no event shall Sony Ericsson or its licensors be liable for incidental or consequential damages of any nature, including but not limited to lost profits or commercial loss, arising out of the use of the information in this document.